

JCNA Tools

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
1004	TOOL		J25	JAGUAR			GCR
1005	TOOL		J39	JAGUAR			GCR
1006	TOOL		J6118	JAGUAR			GCR
1007	TOOL		JD7	JAGUAR			GCR
1009	TOOL		JD10	JAGUAR			GCR
1010	TOOL		JD17B	JAGUAR			GCR
1011	TOOL		JD36	JAGUAR			GCR
1012	TOOL		JD38	JAGUAR			GCR
1014	TOOL		JD40	JAGUAR			GCR
1015	TOOL		JD42	JAGUAR			GCR
1016	TOOL		JD4201	JAGUAR			GCR
1017	TOOL		JD42-2	JAGUAR			GCR
1020	TOOL		CBW34	JAGUAR			GCR
1022	TOOL		SA362				GCR
1024	TOOL		CBW548-2				GCR
1026	TOOL		C3993	JAGUAR			GCR
1027	TOOL		SL3				GCR
1030	TOOL		SL14-1				GCR
1031	TOOL		SL14-3				GCR
1033	TOOL		SL550-4				GCR
1034	TOOL		SL550-5				GCR
1035	TOOL		ZJ102	ZELEND			GCR
1036	TOOL		ZJ102	ZELEND			GCR
1042	TOOL		ZP1007				GCR
1043	TOOL		ZP1007				GCR
118G1428/1	PINION SEAL DRIVER ADAPTOR	CHURCHILL	205179-01	OTC			R9
118G1428/1*	PINION SEAL DRIVER ADAPTOR	CHURCHILL	205179-01*	OTC			R11
118G1428/1**	PINION SEAL DRIVER ADAPTOR	CHURCHILL	205179-01*	OTC			W2A
18G-178	TOOL	CHURCHILL					GCR
18G-389	TOOL						GCR
18G1001	FUEL TANK LOCKING RING TOOL	CHURCHILL	310001	OTC	P9074A	JAGUAR	R6
18G1001*	FUEL TANK LOCKING RING TOOL	CHURCHILL	310001*	OTC	P9074A*	JAGUAR	RS2B
18G1004	CIRCLIP PLIERS	CHURCHILL					R10
18G10116	TOOL	CHURCHILL					R10
18G1016/1	TOOL	CHURCHILL					W3D
18G1017	TOOL	CHURCHILL	CWG42A	JAGUAR			RS2D
18G1018	REAR CLUTCH PISTON REPLACER	CHURCHILL					RS2D
18G1039	TOOL						GCR
18G1107	FRONT CLUTCH PISTON REPLACER	CHURCHILL					R10
18G1205	DRIVELINE FLANGE HOLDER TOOL	CHURCHILL	205053	OTC			R6
18G1205*	DRIVELINE FLANGE HOLDER TOOL	CHURCHILL	205053*	OTC			W2C
18G1259	PILOT STEERING -RACK & PINION	CHURCHILL					R11
18G1267	DAMPER REPLACER SU CARB	CHURCHILL	303109	OTC			R4
18G1295	TOOL	CHURCHILL					GCR
18G1295A	CONTROL VALVE PISTON COMPRESSOR	CHURCHILL					R10
18G1295A*	CONTROL VALVE PISTON COMPRESSOR	CHURCHILL					GCR
18G1295A**	CONTROL VALVE PISTON COMPRESSOR	CHURCHILL					GCR
18G1296	TOOL	CHURCHILL					GCR
18G1296*	TOOL	CHURCHILL					GCR
18G1296A	FRONT PUMP EXTRACTOR	CHURCHILL					R10
18G1298	FRONT & INTERMEDIATE PISTON REPLACER	CHURCHILL					R10
18G1310	BAND APPLICATION PIN GAUGE	CHURCHILL					R10
18G1310*	BAND APPLICATION PIN GAUGE	CHURCHILL					GCR
18G131C	DIFF CASE SPREADER	CHURCHILL	SL1	ZELEND			GCR
18G131C*	DIFF CASE SPREADER	CHURCHILL	SL1A	ZELEND			GCR
18G1324	STEERING RACK BUSHING TOOL	CHURCHILL	SL1A	ZELEND			R11
18G1324*	STEERING RACK BUSHING TOOL	CHURCHILL	SL1A	ZELEND			W3B
18G134	DRIVER HANDLE	CHURCHILL	100013	OTC	550	JAGUAR	R6
18G134*	DRIVER HANDLE	CHURCHILL	100013*	OTC	550*	JAGUAR	GCR
18G134**	DRIVER HANDLE	CHURCHILL	100013**	OTC	550**	JAGUAR	GCR
18G1363	A/C LINK SETTING TOOL	CHURCHILL	412021	OTC			R6
18G1364	SPARK PLUG WRENCH	CHURCHILL	303147	OTC			R4
18G1364*	SPARK PLUG WRENCH	CHURCHILL	303147*	OTC			RS3C

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
18G1428	PINION SEAL DRIVER	CHURCHILL	205179	OTC			R11
18G1432/1	VALVE GUIDE REMOVER/REPLACER	CHURCHILL					RS2B
18G1433	CAMSHAFT TIMING TOOL	CHURCHILL	303187				R12
18G1433*	CAMSHAFT TIMING TOOL	CHURCHILL	303187*	OTC			GCR
18G1434	TIMING COVER BUSHING TOOL	CHURCHILL	303188	OTC			R12
18G1434*	TIMING COVER BUSHING TOOL	CHURCHILL	303188*	OTC			W2A
18G1434/1	TIMING COVER BUSHING REMOVER TOOL	CHURCHILL	303188/1	OTC			RS2B
18G1434/1*	TIMING COVER BUSHING REMOVER TOOL	CHURCHILL	303188/1*	OTC			R12
18G1434/4	TIMING COVER BUSHING REMOVER TOOL	CHURCHILL					R12
18G1434/4*	TIMING COVER BUSHING REMOVER TOOL	CHURCHILL					W3C
18G1435	DUMMY CAMSHAFT CAPS	CHURCHILL	303189	OTC			R12
18G1435*	DUMMY CAMSHAFT CAPS	CHURCHILL	303189*	OTC			RS3B
18G1436	TIMING CHAIN TENSIONER TOOL	CHURCHILL	303190	OTC			R12
18G1436*	TIMING CHAIN TENSIONER TOOL	CHURCHILL	303190*	OTC			W2A
18G1437	CRANK PULLEY RESTRAINING TOOL	CHURCHILL	303191	OTC			R12
18G1437*	CRANK PULLEY RESTRAINING TOOL	CHURCHILL	303191*	OTC			RS3B
18G1437/1	ADAPTOR, CRANK WRENCH	CHURCHILL	303191-01	OTC			R12
18G1437/1*	ADAPTOR, CRANK WRENCH	CHURCHILL	303191-01*	OTC			RS3B
18G1437/2	ADAPTOR, CRANK PULLEY WRENCH	CHURCHILL	303191-02	OTC			W4B
18G1437/3	ADAPTOR, CRANK SHAFT WRENCH	CHURCHILL	303191-03	OTC			R3
18G1445	P/S PUMP DRIVE INSTALLER/REMOVER	CHURCHILL	211095	OTC			R9
18G1445*	P/S PUMP DRIVE INSTALLER/REMOVER	CHURCHILL	211095*	OTC			RS3B
18G1445B	P/S PUMP DRIVE INSTALLER/REMOVER	CHURCHILL	211095*	OTC			RS3B
18G1465	ENGINE LIFTING BRACKETS	CHURCHILL	303192	OTC			R12
18G1465*	ENGINE LIFTING BRACKETS	CHURCHILL	303192*	OTC			W3C
18G1519/A	VALVE SPRING COMPRESSOR	CHURCHILL	303252	OTC	MS1519A	JAGUAR	R4
18G1519/A*	VALVE SPRING COMPRESSOR	CHURCHILL	303252*	OTC	MS1519A*	JAGUAR	GCR
18G1927	FRONT & REAR SEAL INSTALLER	CHURCHILL	307057	OTC			R2
18G2	CRANKSHAFT GEAR PULLER	CHURCHILL					GCR
18G2*	CRANKSHAFT GEAR PULLER	CHURCHILL					GCR
18G257	TOOL	CHURCHILL	10019	OTC			R6
18G284	SLIDE HAMMER	CHURCHILL					GCR
18G284-2	SLIDE HAMMER ADAPTOR	CHURCHILL	100012-01	OTC			W3C
18G284-AAH	REAR HUB BEARING REMOVER	CHURCHILL	308005	OTC			R11
18G284-AAH*	REAR HUB BEARING REMOVER	CHURCHILL	308005*	OTC			W2D
18G284-AAH**	REAR HUB BEARING REMOVER	CHURCHILL	308005**	OTC			GCR
18G468	TOOL	CHURCHILL	JD23	JAGUAR			GCR
18G47	HAND PRESS	CHURCHILL	10019	OTC			RFLR
18G47*	HAND PRESS	CHURCHILL	10019*	OTC			GCR
18G55A	PISTON RING COMPRESSOR TOOL	CHURCHILL					R4
18G55A*	PISTON RING COMPRESSOR TOOL	CHURCHILL					GCR
18G55A8	PISTON RING COMPRESSOR TOOL	CHURCHILL					GCR
18G672	TOOL	CHURCHILL					GCR
18G677/2	PRESSURE TEST ADAPTOR	CHURCHILL	307010-01	OTC			R10
18G677ZC	TOOL	CHURCHILL					R10
18G678	FRONT SERVO SPANNER GUIDE	CHURCHILL					R10
18G681	TOOL	CHURCHILL					R10
18G702	REPLACER, REAR CLUTCH PISTON	CHURCHILL					R10
18G705/4	TOOL	CHURCHILL					RS3B
2004242	DIFF FRONT MOUNTING BUSHING TOOL	OTC					W1B
2010	TOOL		NPN2-95		S353		GCR
204006/1	TRAILING ARM BUSHING TOOL	OTC					R8
204006/4	TRAILING ARM BUSHING TOOL	OTC					R8
204006/5	TRAILING ARM BUSHING TOOL	OTC					R8
204008/1	COIL SPRING COMPRESSOR TOOL	OTC	BLT11048-1	JAGUAR			R8
204008/2	TRAILING ARM BUSHING TOOL	OTC					R8
204008/4	COIL SPRING COMPRESSOR TOOL	OTC					R8
204011/5	ADAPTOR FOR JD1D	OTC					W4C
204011/6	ADAPTOR FOR JD1D	OTC					R8
2040340	REPLACER-BUSH	OTC					W1B
2041	TOOL		S4221A				GCR
204111/2	COIL SPRING COMPRESSOR ADAPTOR	OTC					W3B
204112-02	REAR DAMPER SPRING ADAPTOR	OTC					W1B
204113/1	ADAPTOR FOR 204113 TOOL	OTC					RS2A
204118/2	REAR HUB OIL SEAL TOOL	OTC					W3B
204167	TOOL	OTC					W3C

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
204167	SHOE SPRING COMPRESSOR	OTC					W3C
204225	BUSHING REMOVER REPLACER TOOL	OTC					RS2C
204243	DIFF FRONT BUSH TOOL	OTC					W1C
204244	RECEIVER CUP FRONT BUSH REMOVER	OTC					RS1C
204245	DIFF FRONT MOUNT BUSH TOOL	OTC					W2D
204247	NUT, REAR MOUNT BUSH REMOVER	OTC					W2B
204249	REAR KNUCKLE SUPPORT TOOL	OTC					RS2A
204250	REAR KNUCKLE BEARING REMOVER	OTC					RS1D
204252	BEARING SUPPORT TOOL	OTC					W3C
204253	WASHER REMOVER/REPLACER REAR	OTC					W2C
204254	RS UPPER CONTROL ARM BUSH TOOL	OTC					W2D
204255	RS UPPER CONTROL ARM BUSH TOOL	OTC					W2A
204256	RS LOWER CONTROL ARM BUSH TOOL	OTC					W2D
204257	RS LOWER CONTROL ARM FORWARD	OTC					W2B
204258	RS UPPER CONTROL ARM BUSH TOOL	OTC					W2D
204260	RS LOWER CONTROL ARM BUSH	OTC					W3C
204261	FS LOWER CONTROL ARM FRONT BUSH	OTC					W2B
204262	FS LOWER CONTROL ARM FRONT BUSH	OTC					W2B
204263	OUTPUT BEARING REFIT TOOL	OTC					W2B
204264	PINION SEAL REPLACER	OTC					W3B
204265	FLANGE REMOVER/REPLACER PLATE	OTC					W3B
204266	FLANGE REMOVER/INSTALLER BOSS	OTC					W2B
204268A	FLANGE REMOVER/REPLACER TOOL	OTC					W4B
204270	LOWER BALL JOINT REMOVER TOOL	OTC					W3D
204271	LOWER BALL JOINT REMOVER TOOL	OTC					W3A
204272	LOWER BALL JOINT REMOVER TOOL	OTC					W2B
204273	REMOVE/REFIT STEERING BUSH	OTC					W2A
204274	REMOVE/REFIT STEERING GEAR BUSH	OTC					W2B
204279	FRONT LOWER WISHBONE INSTALL TC	OTC					W2B
204293	BALL JOINT SPLITTER TOOL	OTC					W3D
204295	FLANGE, REMOVER/REFIT PLATE 6 HOLES	OTC					W4C
204296	REAR HUB CARRIER FRONT BUSH REMOVER	OTC					W2B
204297	REAR HUB CARRIER FRONT BUSH INSTALLER	OTC					W2B
204298	REAR HUB CARRIER BUSH REMOVER	OTC					W2B
204299	REAR DIFF MTG BUSH REMOVER SUPPORT	OTC					W2B
204300	REAR HUB CARRIER BUSH REMOVER	OTC					W3A
204301	REAR HUB CARRIER BUSH REMOVER	OTC					RS1D
204302	REAR HUB CARRIER BUSH INSTALLER	OTC					RS1D
204306	GUIDE BUSH INSTALLER	OTC					W2B
204307	FRONT S/F MTG BUSH REMOVER/INSTALLER	OTC					W2B
204308	FRONT S/F MTG BUSH REMOVER/PUSHER	OTC					W2B
204309	HUB CARRIER SUPPORT BEARING INSTALLER	OTC					W3D
204312	BEARING INSTALLER GUIDE	OTC					W3A
204313	BEARING SUPPORT HUB INSTALL	OTC					W4B
204315	REAR S/F MTG BUSH REMOVER PUSHER	OTC					W3A
204317	REAR S/F MTG BUSH INSTALLER PUSHER	OTC					W4C
204318	REAR S/F MTG BUSH INSTALLER CUP	OTC					W2B
204332	BASE GUIDE	OTC					W1B
204333	REMOVER BUSH	OTC					W2B
204334	REPLACER BUSH	OTC					W4C
204335	TOOL	OTC					W2D
204336	REMOVER-BUSH	OTC					W3A
204337	REPLACER SUPPORT BUSH	OTC					W3A
204338	REPLACER BUSH	OTC					W1B
204339	RECEIVER SUPPORT BUSH	OTC					W4B
204341	REPLACER SUPPORT BUSH	OTC					W2A
204463	RECEIVER-BUSH	OTC					W2C
204464	GUIDE INSTALLER	OTC					W1B
204465	INSTALLER BUSH	OTC					W2A
204469	FORCING BOLT	OTC					W2D
204472	RECEIVER SUPORT BUSH	OTC					W1A
204473	REMOVER BUSH	OTC					W2B
204474	REPLACER BUSH	OTC					W1B
204475	REPLACER SUPPORT BUSH	OTC					W3D
204476-01	SPRING COMPRESSOR ADAPTOR	OTC					W3D
204479	REMOVER, BUSH REAR SUBFRAME	OTC					W1B

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
204480	INSTALLER, BUSH REAR SUBFRAME	OTC					W3B
204481	RECEIVER-BUSH	OTC					W3B
204482	REMOVER-BUSH	OTC					W3D
204483	INSTALLER,BUSH	OTC					W4C
204484	RIDE HEIGHT-MEASURING TOOL	OTC					W1A
204485	REMOVER, BUSH FRONT SUBFRAME	OTC					RS1A
204486	REMOVER, BUSH FRONT SUBFRAME	OTC					W3D
204487	INSTALLER, BUSH FRONT SUBFRAME	OTC					RS1C
204488	INSTALLER, BUSH FRONT SUBFRAME	OTC					RS1C
204492	INSTALLER, BUSHING	OTC					W3B
204519	TOOL	OTC					W1A
204594	TOOL	OTC					W2B
204599	BUSHING REMOVER	OTC					RS1A
204600	INSTALLER, BUSHING FRONT LOWER	OTC					W3B
204601	REMOVER, BUSH FRONT LOWER FRONT ARM	OTC					W3B
204725	WHEEL KNUCKLE SUPPORT	OTC					RS2A
204726	TOOL	OTC					W3B
204727	WHEEL BEARING INSTALLER	OTC					W3B
205016	REAR HUB BEARING SEAL REPLACER	OTC	1033	JAGUAR	SL550-4	JAGUAR	GCR
205017	PINION INNER BEARING CUP REPLACER	OTC	1034	JAGUAR	SL550-5	JAGUAR	GCR
205115	GEARBOX DRIVESHAFT SEAL INSTALLER	OTC					W2A
205272/01	SHAFT PROTECTOR	OTC					W2C
205469	FRONT WHEEL BEARING REMOVER	OTC					RS3A
205470	FRONT WHEEL BEARING INSTALLER	OTC					RS3A
205471	DIFF BEARING ADAPTOR REMOVER/REPLACER	OTC					W1B
205491	HUB REPLACER	OTC					W4C
205519	TOOL	OTC					W2B
205520	TOOL	OTC					W2B
205522	TOOL	OTC					W1B
205523	TOOL	OTC					W2A
205533	DIFF FRONT MOUNTING BUSH TOOL	OTC					W1B
205535	PROPSHAFT ALIGNMENT TOOL	OTC					RS2A
205584	TOOL	OTC					W3D
206100	TOOL	OTC					W2D
211156/3	RACK BUSHING INSTALLER/REMOVER	OTC					W4B
211198	TOOL	OTC					W4B
211271	REMOVER/BUSH	OTC					W1C
211941	TOOL	OTC					W2C
214485	TOOL	OTC					W2C
30031068	ENGINE SUPPORT BRACKET	OTC					R5
303091	TOOL	OTC					W2B
303102	CRANKSHAFT DAMPER INSTALLER	OTC					W2B
3031069	TORQUE ADAPTOR	OTC					R5
3031433	TOOL	OTC					W4D
3031434	TOOL	OTC					W4D
3031435	ENGINE LIFTING BRACKETS FRONT	OTC					W4D
3031436	TOOL	OTC					W4D
3031437	REACTION TOOL CRANK DAMPENER	OTC					W4D
3031438	SOCKET LONG CRANK DAMPENER	OTC					W4D
3031439	TOOL	OTC					W4D
3031440	STUD DAMPENER REMOVAL/REPLACER	OTC					W4D
3031441	CRANK DAMPER REMOVER/INSTALLER	OTC					W4D
3031442	TOOL	OTC					W4D
3031443	REAR CRANK COVER ALIGNER	OTC					W4D
3031447	TIMING TOOL	OTC					W4D
3031448	CAMSHAFT LOCKING TOOL	OTC					W4D
3031451	TOOL	OTC					W4D
3031452	CAMSHAFT ROTATING TOOL	OTC					W4D
3031482	TOOL	OTC					W4D
303178	CRANK REAR SEAL INSTALLER TOOL	OTC					W1B
303188/4	TOOL	OTC					W4C
303191-03	ADAPTOR, CRANKSHAFT WRENCH	OTC					W2A
303247	TOOL	OTC					RS2B
303295	AUX DRIVE OIL SEAL REPLACER	OTC					W4C
303335	CRANK DAMPER INSTALLER TOOL	OTC					W2B
303338	TOOL	OTC					RS2B

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
303363	END PLATES FOR MS53C	OTC					RFLR
303363*	END PLATES FOR MS53C	OTC					W1A
303566	CRANK REAR SEAL REMOVER	OTC					W3B
303588	CRANKSHAFT DAMPER REMOVER TOOL	OTC					W3D
303631	TOOL	OTC					W4A
303654	WT SETTING TOOL	OTC					W2B
303660	ADAPTOR FOR OIL PRESSURE	OTC					W2B
303661	ENGINE LIFT BRACKETS, LH & RH	OTC					RS2E
303661*	ENGINE LIFT BRACKETS, LH & RH	OTC					W1D
303664	TOOL	OTC					RS2D
303665	TOOL	OTC					W2A
303666	TOOL	OTC					W2D
303667	TOOL	OTC					W4A
303671	TOOL	OTC					RS2E
303674	TOOL	OTC					W2B
303675	TOOL	OTC					W1D
303676	TOOL	OTC					W3A
303693	V6 VALVE ADJUSTMENT TOOL	OTC					RS2E
303700	FRONT CRANK SEAL REMOVER	OTC					W4B
303713	TOOL	OTC					W1B
303717	TAPPET TOOL	OTC					W3A
303749	ENGINE LIFTING BRACKETS V8 (PAIR)	OTC					W2A
303751	REMOVER OIL SEAL	OTC					W4C
303D055	STRAP WRENCH, UNIVERSAL	OTC					W1A
303D121-01	CRANK BUTTON	OTC					W2C
304311	BEARING INSTALLER PUSHER	OTC					W2C
307378	SEAL REPLACER	OTC					RS1D
307403	GUIDE, FLEXPLATE ALIGNMENT	OTC					W4A
307407	EXTENSION HOUSING SEAL REFIT	OTC					W3B
307445	SETTING PLATE ROTARY SWITCH	OTC					W4C
307448	TOOL	OTC					RS1B
307449	TOOL	OTC					RS2B
307452	GEARBOX FILLER PLUG REMOVAL TOOL	OTC					W2B
308208	GEARBOX DRIVESHAFT SEAL REMOVER	OTC					W3A
308346	TOOL	OTC					W3B
308375	SEAL REMOVER INPUT & OUTPUT	OTC					W4B
308417	MANUAL TRANS INPUT SEAL REPLACER	OTC					RS1B
308418	MANUAL TRANS INPUT SEAL REMOVER	OTC					W2D
308419	CLUTCH ALIGNMENT TOOL	OTC					W2B
308420	TOOL	OTC					W2C
308441	CLUTCH CENTRALIZER	OTC					W2B
308626	TOOL	OTC					W4D
310072A	FUEL PUMP LOCKING NUT REMOVER	OTC					W1A
310078	TOOL	OTC					W4C
310080	TOOL	OTC					W3A
310082	TOOL	OTC					W3C
310094	FUEL TANK STRAP	OTC					W3B
310123	PUMP MODULE WRENCH	OTC					W4C
310127-1	TOOL	OTC					W4A
310147	REMOVE/INSTALL FUEL MODULE RING	OTC					W1A
310154	FUEL DRAIN ADAPTOR	OTC					W1C
310198	INJECTOR GUIDE INSTALLER TEFLON	OTC					W4D
310199	CALIBRATION TOOL INJECTOR TEFLON	OTC					W4D
310200-01	ALIGNMENT PINS FUEL RAIL INSTALLATION	OTC					W4D
412109	A/C COMPRESSOR CLUTCH PULLER	OTC					W3A
412147	TOOL	OTC					W3B
42-27031	TOOL	JAGUAR					RS2E
47046	TOOL	JAGUAR					W3C
5001	TOOL		SRD380				GCR
5003	TOOL						GCR
5005	TOOL						GCR
501059	INSTALLER REAR SUBFRAME MOUNT	OTC					W2A
501060	RECEIVER, CUP REMOVER, REAR SUBFRAME	OTC					W2A
501061	REMOVER/REPLACER SUBFRAME MOUNT	OTC					W1B
501062	REMOVER/REPLACER REAR DIF MOUNT	OTC					W3A
501063	BUSHING RECEIVER REAR MOUNT	OTC					W3A

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
501065	WIPER ARM REMOVAL TOOL	OTC					W2A
501083	TOOL	OTC					W1B
501084	TOOL	OTC					W2A
501085	TOOL	OTC					W3A
501086	RECEIVER	OTC					RS1D
501087	TOOL	OTC					TOP
501088	TOOL	OTC					W4A
501089	TOOL	OTC					W3B
501094	DRILLING RIG	OTC					W2A
501120	REMOVER, DRIVER AIRBAG	OTC					W2B
501168	TOOL	OTC					W2B
502005	SUBFRAME ALIGNMENT PINS	OTC					W4B
550	TOOL	OTC					GCR
60973067	TOOL	JAGUAR					RS5C
7840	TOOL	JAGUAR	1043	JAGUAR			GCR
9543-105	TOOL	JAGUAR					W4B
9543-105/1	TOOL	JAGUAR					RS1D
9543-105/2	TOOL	JAGUAR					RS1D
9543-105/3	TOOL	JAGUAR					RS1D
BLT1061	TOOL	JAGUAR					W3A
C3993	CAM TIMING TOOL	CHURCHILL	1026	JAGUAR			GCR
C3993*	CAM TIMING TOOL	CHURCHILL	1026*	JAGUAR			R4
CBW11A	CLUTCH ASSEMBLE/DISMANTLE TOOL	CHURCHILL					GCR
CBW1A	PRESSURE TEST EQUIPMENT	CHURCHILL					GCR
CBW1C/5	PRESSURE TEST ADAPTOR	CHURCHILL					R10
CBW33	MAINSHAFT ENDFLOAT GAUGE	CHURCHILL					GCR
CBW34	FRONT BAND SPACER GAUGE	CHURCHILL					GCR
CBW42	FRONT CLUTCH PISTON REPLACER	CHURCHILL					GCR
CBW547A/50	FRONT & REAR SERVO ADJUSTER	CHURCHILL					R10
CBW548-2	FRONT SERVO ADJUSTER ADAPTOR	CHURCHILL	1024	JAGUAR			GCR
CBW62	KICKDOWN CABLE REMOVER	CHURCHILL					R10
CBW62*	KICKDOWN CABLE REMOVER	CHURCHILL					W2C
CBW6312A-1	TOOL	CHURCHILL					GCR
CBW7	MAINSHAFT BEARING REPLACER	CHURCHILL					GCR
CBW87	ENDFLOAT CHECKING GAUGE	CHURCHILL					R10
CBW9	GOVERNOR SHAFT SETSCREW WRENCH	CHURCHILL					GCR
CWG37	CLUTCH SPRING COMPRESSOR	CHURCHILL					GCR
CWG37A	CLUTCH SPRING COMPRESSOR	CHURCHILL					RS3B
CWG41	REAR CLUTCH PISTON REPLACER	CHURCHILL					GCR
GD500E	SCAN TOOL	CHURCHILL					RS5C
J-25033	TOOL	JAGUAR					W1C
J-25034-B	P/S PUMP PULLEY REMOVER	JAGUAR					W2A
J115/1	TOOL	CHURCHILL					W1C
J11A	TOOL	JAGUAR					GCR
J14	TOOL	JAGUAR					GCR
J16B	TOOL	JAGUAR					GCR
J17	REAR ROPE SEAL SIZER	JAGUAR	3030122	OTC	1010	JAGUAR	GCR
J32	VALVE SEAL EXPANDER	CHURCHILL					GCR
J33	VALVE SEAL COMPRESSOR	CHURCHILL					GCR
J34	SPLINE SEAL PROTECTOR	CHURCHILL					GCR
J38737/4	TOOL	JAGUAR					RS5A
J4160	TOOL	JAGUAR					W1B
J6118	TOOL	JAGUAR					GCR
J8	ENGINE LIFTING PLATE	CHURCHILL					GCR
J8999-9	TOOL	JAGUAR					W4C
JAG067-01	BRACKET DRIVESHAFT BALANCER	JAGUAR					RS1F
JAG067-02	BRACKET DRIVESHAFT BALANCER	JAGUAR					W2B
JAG067-04	BRACKET DRIVESHAFT BALANCER	JAGUAR					RS3A
JAG073	TOOL	JAGUAR					RS5C
JAG1500	RADIO BEZEL NUT TOOL	JAGUAR					W2A
JAG1505	FRONT SUSPENSION SETTING TUBES	JAGUAR					RS1C
JAG1506	TOOL	JAGUAR					GCR
JAG1509	TOOL	JAGUAR					GCR
JAG1512	TOOL	JAGUAR					W3C
JAG169K	TOOL	JAGUAR					GCR
JAG704130	TOOL	JAGUAR					GCR

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
JD132/1	TOOL	CHURCHILL	204113/1	OTC			R7
JD132/2	ADAPTOR FOR 204113	CHURCHILL	204113/2	OTC			RS1B
JD133	CAMBER TIE DOWN LINK FRONT	CHURCHILL	204114	OTC			R7
JD133*	CAMBER TIE DOWN LINK FRONT	CHURCHILL	204114*	OTC			V2
JD133**	CAMBER TIE DOWN LINK FRONT	CHURCHILL	204114**	OTC			W3B
JD135	FRONT LOWER BUSHING TOOL	CHURCHILL	204115	OTC			R7
JD135/2	REAR SHOCK BUSHING REPLACER	CHURCHILL	204115-01	OTC			R7
JD135/2*	REAR SHOCK BUSHING REPLACER	CHURCHILL	204115-01*	OTC			V2
JD135/2**	REAR SHOCK BUSHING REPLACER	CHURCHILL	204115-01**	OTC			W4B
JD136	BRAKE PAD WEAR GAUGE	CHURCHILL	206022	OTC			R9
JD136*	BRAKE PAD WEAR GAUGE	CHURCHILL	206022*	OTC			V2
JD136**	BRAKE PAD WEAR GAUGE	CHURCHILL	206022**	OTC			RS2B
JD138	PM4 SOCKET EXTRACTOR TOOL	CHURCHILL	418011	OTC			R7
JD138/1	REAR HUB END FLOAT GAUGE TOOL	CHURCHILL	204086	OTC			RS3B
JD14	REAR WISHBONE DUMMY SHAFT	CHURCHILL	204002	OTC	J14	CHURCHILL	R8
JD14*	REAR WISHBONE DUMMY SHAFT	CHURCHILL	204002*	OTC	J14*	CHURCHILL	GCR
JD14**	REAR WISHBONE DUMMY SHAFT	CHURCHILL	204002**	OTC	J14**	CHURCHILL	RS2C
JD141	P.M.H.D. SOCKET PIN INSTALLER	CHURCHILL	418012	OTC			R7
JD142	HANDBRAKE CABLE REMOVER TOOL	CHURCHILL	206023	OTC			R9
JD142*	HANDBRAKE CABLE REMOVER TOOL	CHURCHILL	206023*	OTC			V2
JD143	BUSHING REMOVER/REPLACER TOOL	CHURCHILL	204116	OTC			R7
JD143*	BUSHING REMOVER/REPLACER TOOL	CHURCHILL	204116*	OTC			V2
JD143-6	ADAPTOR FOR JD143	CHURCHILL	204116-06	OTC			V3
JD143-A1/2	LOWER WISHBONE REAR ADAPTOR	CHURCHILL	204116-03	OTC			RS1B
JD143/1	ADAPTOR RING FOR JD143 TOOL	CHURCHILL	204116-01	OTC			R7
JD143/2	ADAPTOR RING FOR JD143/1 TOOL	CHURCHILL	204116-02	OTC			R7
JD143/3	ADAPTOR RING FOR JD143 TOOL	CHURCHILL	204116-03	OTC			R7
JD143/3*	ADAPTOR RING FOR JD143 TOOL	CHURCHILL	204116-03*	OTC			V2
JD143/4	ADAPTOR RING FOR JD143 TOOL	CHURCHILL	204116-04	OTC			R7
JD143/4*	ADAPTOR RING FOR JD143 TOOL	CHURCHILL	204116-04*	OTC			V2
JD143/5	FRONT SUBFRAME ADAPTOR FOR JD143	CHURCHILL	204116-05	OTC			R7
JD143/6	ADAPTOR FOR JD143	CHURCHILL	204116-06	OTC			R7
JD143/7	PENDULUM BUSHING ADAPTOR	CHURCHILL	204116-07	OTC			V3
JD143/8	ADAPTOR FOR JD143	CHURCHILL	204116-08	OTC			R7
JD145	CAMBER TIE DOWN LINKS REAR	CHURCHILL	204117	OTC			R7
JD145*	CAMBER TIE DOWN LINKS REAR	CHURCHILL	204117*	OTC			V3
JD15	REAR HUB MASTER SPACER	CHURCHILL	204003	OTC	1003	JAGUAR	R8
JD15*	REAR HUB MASTER SPACER	CHURCHILL	204003*	OTC	1003*	JAGUAR	RS2B
JD151	AUX DRIVE OIL SEAL REPLACER	CHURCHILL	18G1469	CHURCHILL			R12
JD151*	AUX DRIVE OIL SEAL REPLACER	CHURCHILL	18G1469*	CHURCHILL			W4B
JD151/1	AUX DRIVE OIL SEAL REPLACER	CHURCHILL					RS2B
JD153	STRUT LOCK NUT REMOVAL TOOL	CHURCHILL	304001	OTC			V3
JD153*	STRUT LOCK NUT REMOVAL TOOL	CHURCHILL	304001*	OTC			RS3B
JD154	SPEEDO/TACH REMOVER TOOL	CHURCHILL	418007	OTC			R9
JD156	JURID PROPSHAFT TOOL	CHURCHILL	205272	OTC			R9
JD156*	JURID PROPSHAFT TOOL	CHURCHILL	205272*	OTC			V3
JD156**	JURID PROPSHAFT TOOL	CHURCHILL	205272**	OTC			W3D
JD157	JURID PROPSHAFT TOOL	CHURCHILL					R10
JD158	CONV REAR WINDOW RETAINER	CHURCHILL					R6
JD158*	CONV REAR WINDOW RETAINER	CHURCHILL					RS3C
JD158**	CONV REAR WINDOW RETAINER	CHURCHILL					V3
JD159	AIRBAG ARM/DISARM TOOL	CHURCHILL	211151	OTC			R9
JD160/1	UPPER WISHBONE REMOVER TOOL	CHURCHILL	204149/1	OTC			R7
JD160/2	UPPER WISHBONE REMOVER TOOL	CHURCHILL	204149/2	OTC			R7
JD160/2*	UPPER WISHBONE REMOVER TOOL	CHURCHILL	204149/2*	OTC			V3
JD160/3	UPPER WISHBONE REMOVER TOOL	CHURCHILL	204149/3	OTC			R7
JD160/3*	UPPER WISHBONE REMOVER TOOL	CHURCHILL	204149/3*	OTC			V3
JD160/3**	UPPER WISHBONE REMOVER TOOL	CHURCHILL	204149/3**	OTC			RS2B
JD161	ROTARY SWITCH SETTING TOOL	CHURCHILL	307218	OTC			R3
JD162	ROTARY SWITCH SETTING TOOL	CHURCHILL	307218	OTC			R10
JD163	REAR SEAL INSTALLER TOOL	CHURCHILL	303339	OTC			R4
JD163*	REAR SEAL INSTALLER TOOL	CHURCHILL	303339*	OTC			V4
JD165	RACK BUSHING TOOL	CHURCHILL	211156	OTC			R11
JD165*	RACK BUSHING TOOL	CHURCHILL	211156*	OTC			W4B
JD165/2	TOOL	CHURCHILL	211156/2	OTC			V4
JD165/3	TOOL	CHURCHILL	211156/3	OTC			W4B

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
JD165/4	RACK BUSHING TOOL	CHURCHILL	211156/4	OTC			V4
JD165/7	RACK BUSHING TOOL	CHURCHILL					RS3B
JD165A/4	RACK BUSHING TOOL	CHURCHILL	211156/4	OTC			W3C
JD168	OIL SEAL REMOVER/REPLACER	CHURCHILL					RS1C
JD169/K	TOOL						GCR
JD16B	TOOL	CHURCHILL					GCR
JD16C/1	UPPER WISHBONE BUSHING TOOL	CHURCHILL	204004/1	OTC			R8
JD16C/2	UPPER WISHBONE BUSHING TOOL	CHURCHILL	204004/2	OTC			R8
JD16C/3	UPPER WISHBONE BUSHING TOOL	CHURCHILL	204004/3	OTC			R8
JD173	PM5 CONNECTOR PIN TOOL	CHURCHILL	418024	OTC			R2
JD174	FUEL TANK FLANGE WRENCH	CHURCHILL	412070	OTC			R2
JD174*	FUEL TANK FLANGE WRENCH	CHURCHILL	412070*	OTC			V4
JD174**	FUEL TANK FLANGE WRENCH	CHURCHILL	412070**	OTC			RS2A
JD175	FUEL TANK HOSE TOOL	CHURCHILL	412071	OTC			R2
JD175*	FUEL TANK HOSE TOOL	CHURCHILL	412071*	OTC			W2C
JD176	POWER VALVE BLOCK RELIEF TOOL	CHURCHILL	204162	OTC			R2
JD176*	POWER VALVE BLOCK RELIEF TOOL	CHURCHILL	204162*	OTC			R6
JD177	FUSE CONNECTOR PIN REMOVAL	CHURCHILL	418025	OTC			R2
JD177*	FUSE CONNECTOR PIN REMOVAL	CHURCHILL	418025*	OTC			V4
JD178	TOOL	CHURCHILL					R2
JD179	FRONT HUB OIL SEAL TOOL	CHURCHILL	204165	OTC			R2
JD179*	FRONT HUB OIL SEAL TOOL	CHURCHILL	204165*	OTC			V4
JD179**	FRONT HUB OIL SEAL TOOL	CHURCHILL	204165**	OTC			RS1C
JD17B	ROPE SEAL SIZER	CHURCHILL	30312	OTC	1010	JAGUAR	R4
JD17B*	ROPE SEAL SIZER	CHURCHILL	30312*	OTC	1010*	JAGUAR	GCR
JD17B**	ROPE SEAL SIZER	CHURCHILL	30312**	OTC	1010**	JAGUAR	W3B
JD180	FRONT HUB OIL SEAL TOOL	CHURCHILL	204166	OTC			R2
JD180*	FRONT HUB OIL SEAL TOOL	CHURCHILL	204166*	OTC			V4
JD180**	FRONT HUB OIL SEAL TOOL	CHURCHILL	204166**	OTC			RS1C
JD181	INJECTION PRESSURE ADAPTOR	CHURCHILL	310043	OTC			R2
JD182	TOOL	CHURCHILL	310044	OTC			V4
JD183	TOOL	CHURCHILL	310045	OTC			V4
JD184	PINION VALVE EXTRACTOR TOOL	CHURCHILL	211181	OTC			R2
JD184*	PINION VALVE EXTRACTOR TOOL	CHURCHILL	211181*	OTC			W2B
JD185	PINION VALVE LOADING TOOL SET	CHURCHILL	211182	OTC			R2
JD186*	PINION VALVE LOADING TOOL SET	CHURCHILL	211182*	OTC			W3A
JD188	UNDER DASH REMOVAL TOOL	CHURCHILL	501019	OTC			R2
JD189	TOOL	CHURCHILL	3033379	OTC			R2
JD189*	TOOL	CHURCHILL	3033379*	OTC			W1B
JD191	FRONT PUMP OIL SEAL TOOL	CHURCHILL	307243	OTC			R2
JD191*	FRONT PUMP OIL SEAL TOOL	CHURCHILL	307243*	OTC			RS2B
JD192	BAND APPLY PIN CHECKING TOOL	CHURCHILL	307244	OTC			R2
JD193	BAND APPLY PIN GAUGE	CHURCHILL	307245	OTC			R2
JD193*	BAND APPLY PIN GAUGE	CHURCHILL	307245*	OTC			RS5A
JD195	LABINOL TERMINAL EXTRACTOR	CHURCHILL	418039	OTC			R2
JD196	LABINOL CONNECTOR SEPARATOR	CHURCHILL	418040	OTC			R2
JD197	FRONT COMP SEAL REMOVER/INSTALLER	CHURCHILL	412083	OTC			W3B
JD198	PINOIN SEAL INSTALLER	CHURCHILL	205334	OTC			R2
JD198*	PINOIN SEAL INSTALLER	CHURCHILL	205334*	OTC			W2A
JD199	TOOL	CHURCHILL					W2D
JD199/1	TOOL	CHURCHILL					RS3B
JD1B/1	TOOL	CHURCHILL					R8
JD1C	TOOL	CHURCHILL					GCR
JD1D	HUB REMOVER TOOL	CHURCHILL	20411	OTC			R8
JD1D*	HUB REMOVER TOOL	CHURCHILL	20411*	OTC			GCR
JD1D/2	APAPTOR FOR JD1D	CHURCHILL	204011/2	OTC			R8
JD1D/7	APAPTOR FOR JD1D	CHURCHILL	204011/7	OTC			R8
JD2	TOOL	CHURCHILL					GCR
JD200	SUNROOF SEAL CRIMPING TOOL	CHURCHILL	501023	OTC			RS1D
JD201	HELLA FOG LIGHT REMOVAL TOOL	CHURCHILL	417001	OTC			RS2C
JD202	FACIA VENT REMOVAL TOOL	CHURCHILL	501024	OTC			R5
JD206/2	TOOL	CHURCHILL					RS1B
JD206/2*	TOOL	CHURCHILL					W1C
JD20A-1	HUB BEARING CUP REPLACER	CHURCHILL	201005-01	OTC			R8
JD20A-1/6	HUB BEARING CUP REPLACER ADAPTOR	CHURCHILL					R8
JD21	TORQUE ARM BUSH REMOVER	CHURCHILL					GCR

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
JD21/1	PART OF JD21 SET	CHURCHILL					RS2C
JD21/2	PART OF JD21 SET	CHURCHILL					RS2C
JD21/3	PART OF JD21 SET	CHURCHILL					R8
JD21/3*	PART OF JD21 SET	CHURCHILL					RS2C
JD21/4	PART OF JD21 SET	CHURCHILL					RS2C
JD21/5	PART OF JD21 SET	CHURCHILL					RS2C
JD216	CRANK LOCK-UP BOLT TOOL	CHURCHILL	303531	OTC			R3
JD217	WRENCH, TIMING CHAIN ADJUSTER	CHURCHILL	303532	OTC			R3
JD218	TENSIOINER, TIMING CHAIN	CHURCHILL	303533	OTC			R3
JD220	DUMMY BEARING CAPS	CHURCHILL	303534	OTC			RS1C
JD221	PROTECTOR, BIG END	CHURCHILL	303535	OTC			R3
JD222	LIFTING PLATES, ENGINE	CHURCHILL	303536	OTC			R3
JD223	BRACKET, ENGINE MOUNTING	CHURCHILL	303537	OTC			RS1F
JD224	PUSH OUT TOOL, FRONT HUB	CHURCHILL	204193	OTC			R1
JD224*	PUSH OUT TOOL, FRONT HUB	CHURCHILL	204193*	OTC			RS1B
JD225	REMOVER, FRONT HUB	CHURCHILL	204194	OTC			RS2C
JD226	ADAPTOR, SPRING COMPRESSOR	CHURCHILL	204112-01	OTC			R1
JD226*	ADAPTOR, SPRING COMPRESSOR	CHURCHILL	204112-01*	OTC			RS2B
JD227	HUB HOLDING TOOL	CHURCHILL	204195	OTC			R1
JD227*	HUB HOLDING TOOL	CHURCHILL	204195*	OTC			R13
JD228	HUB HOLDING TOOL	CHURCHILL	200240	OTC	206066	OTC	R3
JD228*	HUB HOLDING TOOL	CHURCHILL	200240*	OTC	206066*	OTC	RS3B
JD229	REAR SEAL REMOVER/REPLACER	CHURCHILL	303538	OTC			R3
JD229*	REAR SEAL REMOVER/REPLACER	CHURCHILL	303538*	OTC			RS1D
JD23	RUBBER MOULDING BASE TOOL	CHURCHILL	18G468	CHURCHILL			R6
JD23*	RUBBER MOULDING BASE TOOL	CHURCHILL	18G468*	CHURCHILL			GCR
JD231	FUEL INJECTOR REMOVER	CHURCHILL	303539	OTC			R3
JD232	TAPPET ADJUSTING TOOL	CHURCHILL	303540	OTC			R3
JD233	FAN NOZZLE AIR GUN	CHURCHILL	303590	OTC			R3
JD233/4	TOOL	CHURCHILL					RS2C
JD234	CRANK FRONT OIL SEAL REMOVER	CHURCHILL	303541	OTC			R3
JD235	CRANKSHAFT SEAL REPLACER	CHURCHILL	303542	OTC			R3
JD235*	CRANKSHAFT SEAL REPLACER	CHURCHILL	303542*	OTC			W3B
JD236	TOOL	CHURCHILL	204196	OTC			RS1D
JD237	BEARING REMOVER	CHURCHILL	204197	OTC			W2C
JD238	TOOL	CHURCHILL	204198	OTC			RS1C
JD239	UPPER WISHBONE BALL JOINT TOOL	CHURCHILL	204199	OTC			RS1B
JD24	TOOL	CHURCHILL					GCR
JD241	MONOSTRUT BUSH REMOVER	CHURCHILL	204201	OTC			R1
JD242	FRONT SUMP BUSH INSTALLER	CHURCHILL	204212	OTC			R1
JD242*	FRONT SUMP BUSH INSTALLER	CHURCHILL	204212*	OTC			W2C
JD243	FRONT SUMP CROSS BEAM BUSH TOOL	CHURCHILL	204213	OTC			R1
JD243*	FRONT SUMP CROSS BEAM BUSH TOOL	CHURCHILL	204213*	OTC			W2C
JD244	FRONT SUMP CROSS BEAM BUSH TOOL	CHURCHILL	204214	OTC			R1
JD244*	FRONT SUMP CROSS BEAM BUSH TOOL	CHURCHILL	204214*	OTC			W2C
JD247	FRONT PUMP OIL SEAL REPLACER	CHURCHILL	307357	OTC			W4A
JD248	REAR EXT OIL SEAL REPLACER	CHURCHILL	307358	OTC			W1B
JD25B	CAMBER TIE DOWN LINKS	CHURCHILL	204007	OTC	1004	JAGUAR	R8
JD25B*	CAMBER TIE DOWN LINKS	CHURCHILL	204007*	OTC	1004*	JAGUAR	GCR
JD25B**	CAMBER TIE DOWN LINKS	CHURCHILL	204007**	OTC	1004**	JAGUAR	RS3B
JD2B	TIMING CHAIN ADJUSTER	CHURCHILL	303022	OTC			R4
JD36	RACK ALIGNMENT TOOL	CHURCHILL	1011	JAGUAR	JD36A	CHURCHILL	GCR
JD36*	RACK ALIGNMENT TOOL	CHURCHILL	1011*	JAGUAR	JD36A*	CHURCHILL	R11
JD37	PM4 PIN EXTRACTOR TOOL	CHURCHILL	418010	OTC			R7
JD38	V12 DAMPER SETTING JIG	CHURCHILL	1012	JAGUAR			RS4B
JD38*	V12 DAMPER SETTING JIG	CHURCHILL	1012*	JAGUAR			GCR
JD38/18	TOOL	CHURCHILL					GCR
JD39	ELECTRICAL TERMINAL SEAL EXPANDER	CHURCHILL					R7
JD39	JACKSHAFT SPROCKET RETAINER	CHURCHILL	303046	OTC	1005	JAGUAR	R4
JD39*	JACKSHAFT SPROCKET RETAINER	CHURCHILL	303046*	OTC	1005*	JAGUAR	GCR
JD39**	JACKSHAFT SPROCKET RETAINER	CHURCHILL	303046**	OTC	1005**	JAGUAR	W2C
JD40	TERMINAL SEAL INSTALLER TOOL	CHURCHILL					R9
JD40	CAMSHAFT SPROCKET RETAINER	CHURCHILL	303047	OTC	1013	JAGUAR	R4
JD40*	TERMINAL SEAL INSTALLER TOOL	CHURCHILL					RS3B
JD40*	CAMSHAFT SPROCKET RETAINER	CHURCHILL	303047*	OTC	1013*	JAGUAR	GCR
JD40/2	TOOL	CHURCHILL					R7

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
JD41	CYLINDER LINER RETAINERS	CHURCHILL	303048	OTC	1014	JAGUAR	RS5A
JD41*	CYLINDER LINER RETAINERS	CHURCHILL	303048*	OTC	1014*	JAGUAR	GCR
JD41**	CYLINDER LINER RETAINERS	CHURCHILL	303048**	OTC	1014**	JAGUAR	R4
JD42	TOOL	CHURCHILL	1015	JAGUAR			RS5B
JD42*	TOOL	CHURCHILL	1015*	JAGUAR			GCR
JD42-1	TOOL	CHURCHILL	1016	JAGUAR			GCR
JD42-2	TOOL	CHURCHILL	1017	JAGUAR			RS5B
JD42/2*	TOOL	CHURCHILL	1017*	JAGUAR			GCR
JD50	TIMING CHAIN TENSIONER	CHURCHILL	303032	OTC			R4
JD50*	TIMING CHAIN TENSIONER	CHURCHILL	303032*	OTC			GCR
JD50**	TIMING CHAIN TENSIONER	CHURCHILL	303032**	OTC			RS5B
JD50/9	TOOL	CHURCHILL					R4
JD550-1	DRIVE SHAFT OIL SEAL REMOVER/INSTALLER	CHURCHILL	205234	OTC			R9
JD550-3	CRANK REAR OIL SEAL TOOL	CHURCHILL	303265	OTC			R12
JD550-3*	CRANK REAR OIL SEAL TOOL	CHURCHILL	303265*	OTC			W1B
JD550-4/1	REAR HUB OIL SEAL TOOL	CHURCHILL	204118-4/1	OTC			R7
JD550-4/1*	REAR HUB OIL SEAL TOOL	CHURCHILL	204118-4/1*	OTC			W4C
JD550-4/2	REAR HUB OIL SEAL TOOL	CHURCHILL	204118-4/2	OTC			R7
JD550-5/1	FRONT HUB OIL SEAL TOOL	CHURCHILL	204119-5/1	OTC			R7
JD550-5/2	FRONT HUB OIL SEAL TOOL	CHURCHILL	204119-5/2	OTC			R7
JD550-5/2*	FRONT HUB OIL SEAL TOOL	CHURCHILL	204119-5/2*	OTC			W4C
JD550-6	ADAPTOR FOR REAR HUB	CHURCHILL	204120	OTC			R7
JD550-6*	ADAPTOR FOR REAR HUB	CHURCHILL	204120*	OTC			W4B
JD60/4	TOOL	CHURCHILL					RS2C
JD6118/C	VALVE SPRING COMPRESSOR TOOL	CHURCHILL	303441	OTC	1006	JAGUAR	R4
JD6118/C*	VALVE SPRING COMPRESSOR TOOL	CHURCHILL	303441*	OTC	1006*	JAGUAR	GCR
JD677/3	PRESSURE TEST ADAPTOR	CHURCHILL					W4C
JD6B	FRONT COIL SPRING COMPRESSOR	CHURCHILL					GCR
JD6G	TOOL	CHURCHILL					GCR
JD6G/6	TOOL	CHURCHILL					RS2C
JD7	HUB PULLER, WIRE WHEELS	CHURCHILL					GCR
JD7*	HUB PULLER, WIRE WHEELS	CHURCHILL					RS5A
JLR13100	TOOL	CHURCHILL					W4D
JQG1506	TOOL	OTC					GCR
JTP085	TOOL	JAGUAR					R11
JZ102	TOOL	JAGUAR	1036	JAGUAR			GCR
L176	TOOL						GCR
L178	TOOL						GCR
L179	PISTON RING FITTING TOOL 1-1/8"	JAGUAR					GCR
L180	PISTON RING FITTING TOOL 1-3/8"	JAGUAR					GCR
L183	TOOL						GCR
L183A	OIL PUMP BODY REMOVER	JAGUAR					GCR
L183A1	TOOL						GCR
L183A2	TOOL						GCR
L184	PUMP BARREL REPLACER	JAGUAR					GCR
L185A	TOOL						GCR
L188	HYDRAULIC TEST GAUGE & HOSE	JAGUAR					GCR
L301	HYDRAULIC GAUGE, HOSE & ADAPTOR	JAGUAR					GCR
LRT-12-091	TOOL	JAGUAR					RS1D
MS1519A	TOOL						GCR
MS1533	PM5 PIN EXTRACTOR TOOL	JAGUAR					R2
MS370	TOOL	JAGUAR	15059	JAGUAR			RS2D
MS76R/1	TOOL	JAGUAR					R4
SA362	TOOL	JAGUAR	1022	JAGUAR			GCR
SL1	TOOL	JAGUAR					GCR
SL14	TOOL	JAGUAR					GCR
SL14-1	DIFF BEARING CONE REPLACER/REMOVER	JAGUAR	1030	JAGUAR			GCR
SL14-2	DIFF BEARING CONE REPLACER/REMOVER	JAGUAR	1030	JAGUAR			GCR
SL14-3	DIFF BEARING CONE REPLACER/REMOVER	JAGUAR	1031	JAGUAR			GCR
SL14-6	DIFF BEARING CONE REPLACER/REMOVER	JAGUAR					GCR
SL14-7	DIFF BEARING CONE REPLACER/REMOVER	JAGUAR					GCR
SL14-8	DIFF BEARING CONE REPLACER/REMOVER	JAGUAR					GCR
SL15B	DRIVESHAFT BEARING NUT WRENCH	JAGUAR					GCR
SL3	PINION SETTING GAUGE	JAGUAR	1027	JAGUAR			GCR
SL4221A	TOOL	JAGUAR	2041	JAGUAR			GCR
SL550-4	TOOL	JAGUAR					GCR

Tool number	Description	Source	Alternate1	Source1	Alternate2	Source2	Location
SL550-5	TOOL	JAGUAR					GCR
SL7	REAR HUB BEARING REPLACER TOOL	JAGUAR	204083	OTC			R8
SL7	REAR HUB BEARING REPLACER TOOL	JAGUAR	204083	OTC			GCR
SRD380	TOOL	JAGUAR	5001	JAGUAR			GCR
STM7055	TOOL	JAGUAR					RS2D
VLC-18G-708	TOOL						GCR
VLC21-194	TOOL	JAGUAR					W4A
YMB105	TOOL	JAGUAR					GCR
ZJ102	TOOL	ZELEDA	1035	JAGUAR			GCR